
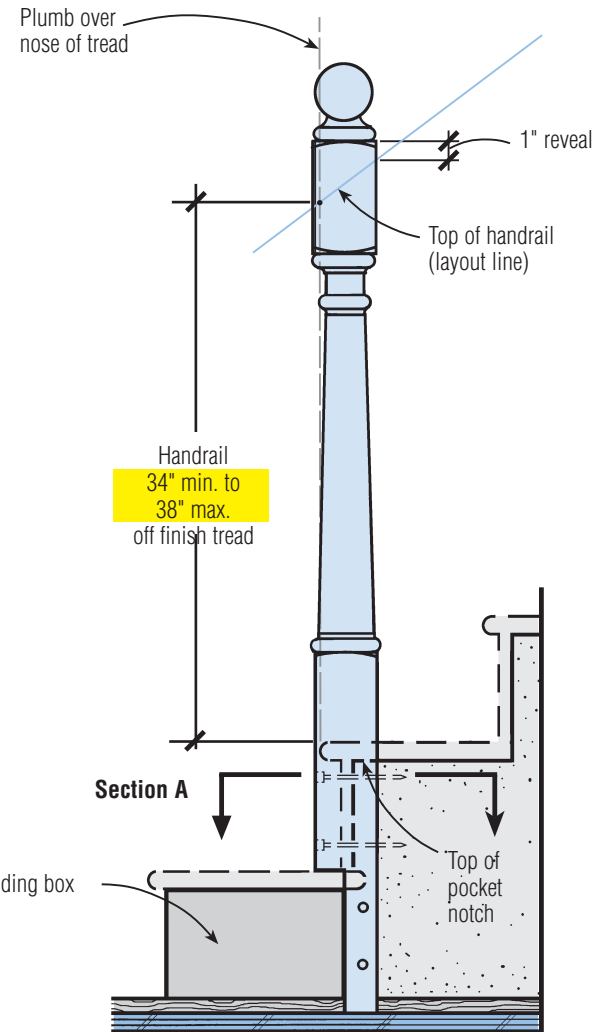
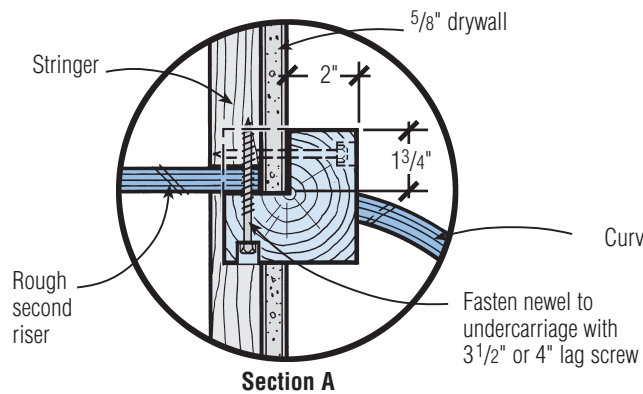


Figure 8-113. Bottom Newel

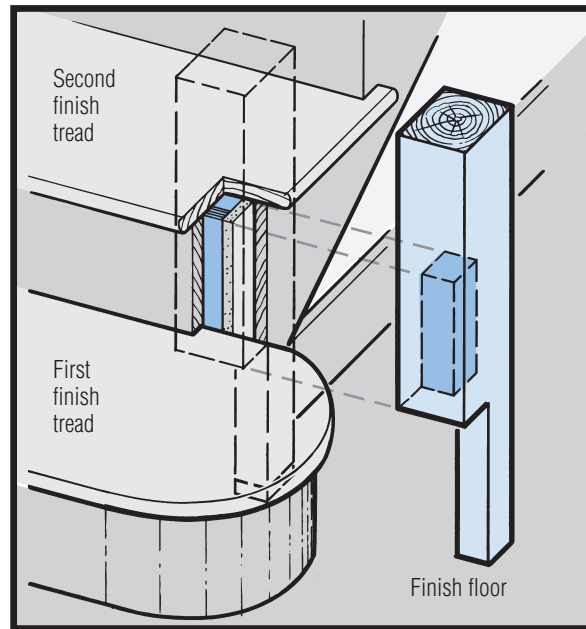

Carry the line of the top of the handrail across to the front side of the newel to a point exactly over the nose of the second tread. This should be slightly in from the newel edge to allow the nosing to die into the newel with a slight reveal.